


**NOTICE:** FOR INSTALLATION BY A QUALIFIED ELECTRICIAN IN ACCORDANCE WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES AND COMMUNICATIONS STANDARDS. ADHERE TO THE FOLLOWING INSTRUCTIONS AND ANY INSTRUCTIONS INCLUDED WITH THE INDIVIDUAL RACEWAY COMPONENTS.

1. INSTALL BOX CHASSIS TO RACEWAY BASE. END KIT & RACEWAY BASE EDGE MUST BE INSTALLED FIRST IF MOUNTING BOX ON RACEWAY BASE END.
2. MAKE WIRING CONNECTIONS AS REQUIRED, AND ROUTE WIRES/CABLES AS REQUIRED.
3. INSTALL COVER WITH SUPPLIED SCREWS.

Classification; CTS/DTS 3.102 Flushfloor, 3.103 Onfloor, 6.101.1 Dry-Treatment Only, 6.2.6 10J Impact, 6.102.3 1,000 N Small Surface Load, 6.4.1 Non-Flame Propagating  
IP41; Min Storage Temp - 25°C; Installation and Application Temp - 15°C to 60°C

**CAUTION:** ENSURE EDGE OF RACEWAY COVER IS DEBURRED.

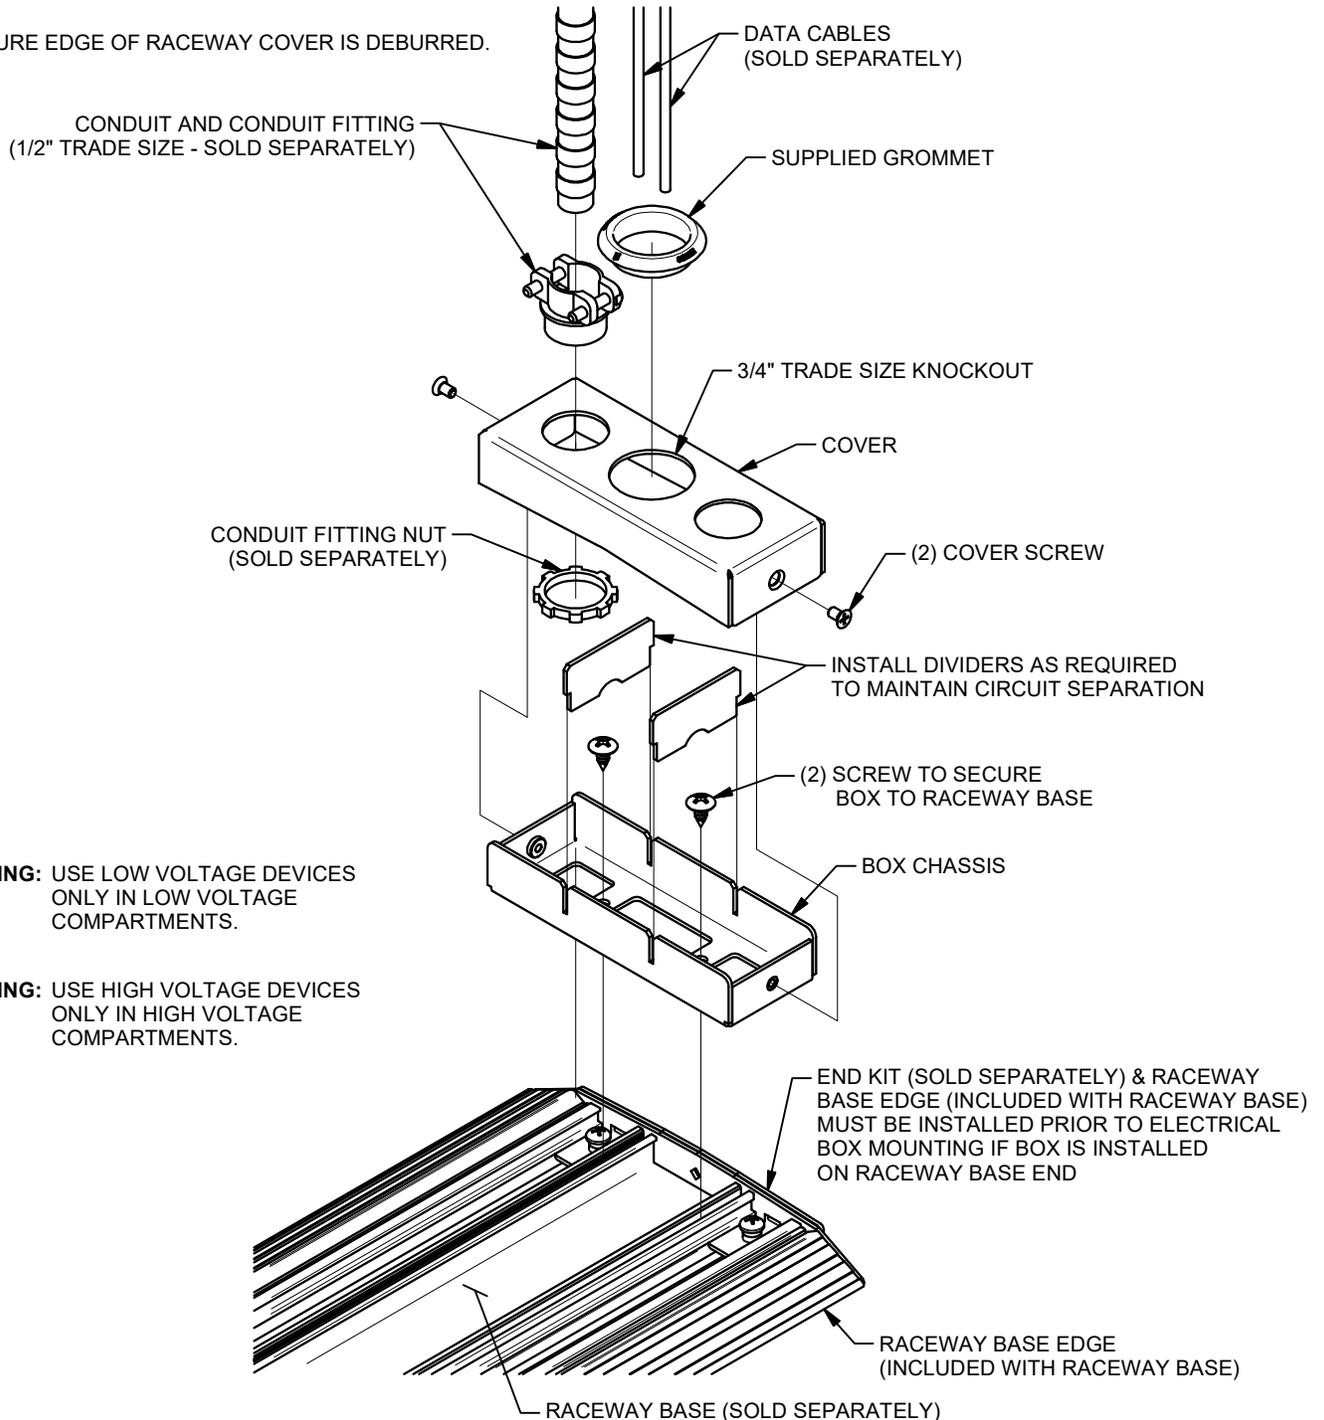

**⚠ WARNING:** USE LOW VOLTAGE DEVICES ONLY IN LOW VOLTAGE COMPARTMENTS.

**⚠ WARNING:** USE HIGH VOLTAGE DEVICES ONLY IN HIGH VOLTAGE COMPARTMENTS.