


SW-WF-RIN Rough-In Box Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207


NOTICE: FOR INSTALLATION BY A QUALIFIED ELECTRICAN IN ACCORDANCE WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES AND COMMUNICATIONS STANDARDS. ADHERE TO THE FOLLOWING INSTRUCTIONS AND ANY INSTRUCTIONS INCLUDED WITH THE INDIVIDUAL RACEWAY COMPONENTS.

1. INSTALL CHASSIS ONTO SILL PLATE.

CAUTION: ENSURE EDGE OF RACEWAY COVER IS DEBURRED.

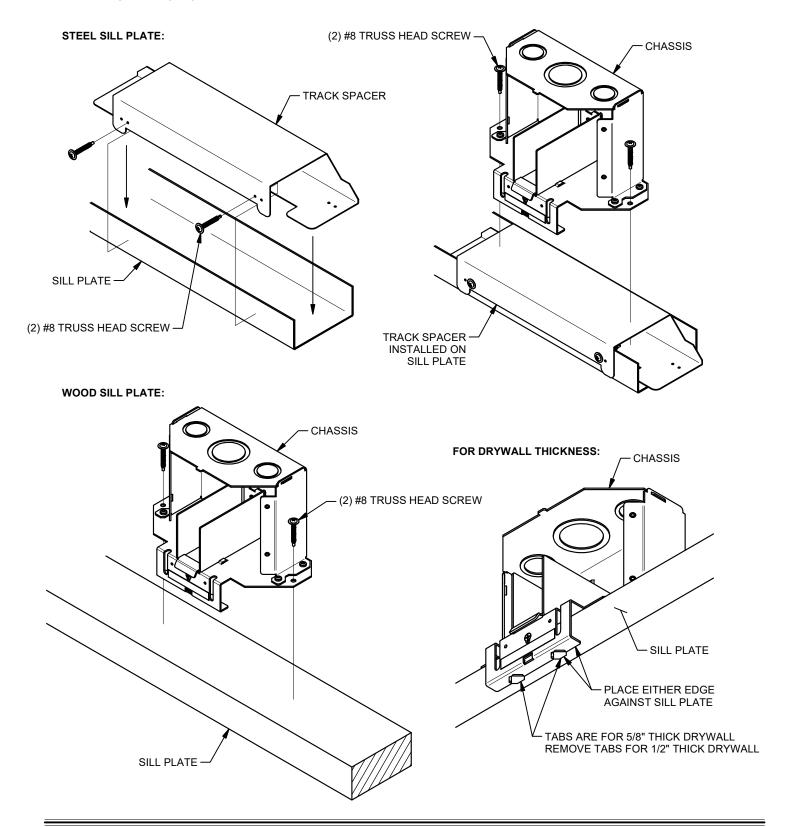

43393 LIT1786A

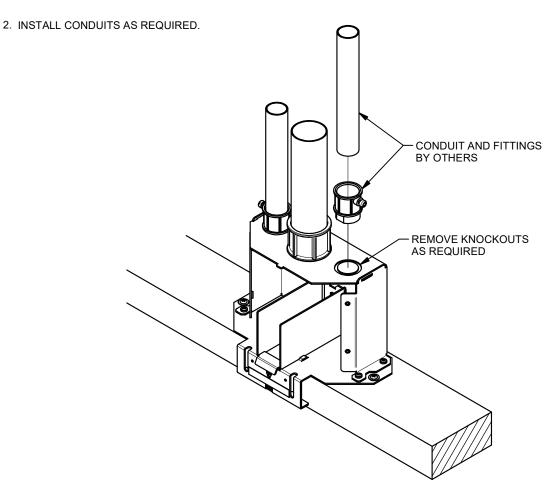

3. INSTALL COVERS

